



1x 4x 4x 4x

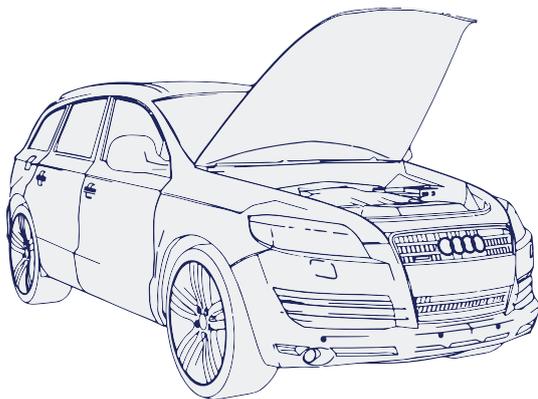


1

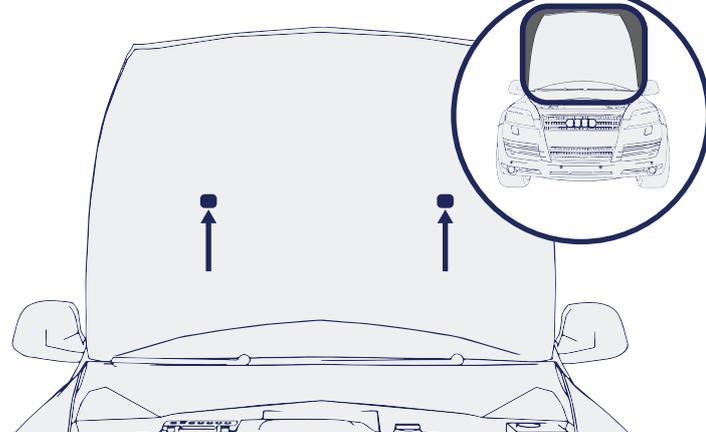


Use "plastic clips of bonnet insulation" or holes to attach the PA2 AUTOMOTIVE fire extinguishing system.

2

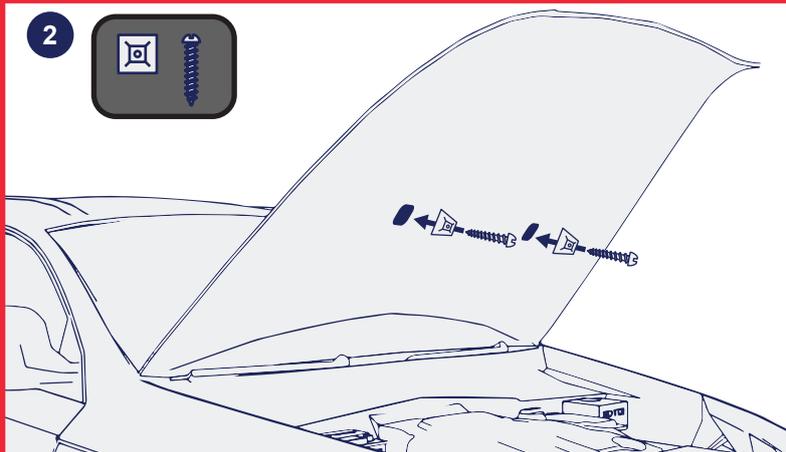


Screw the enclosed plastic squares into the "plastic clips of bonnet insulation".

3

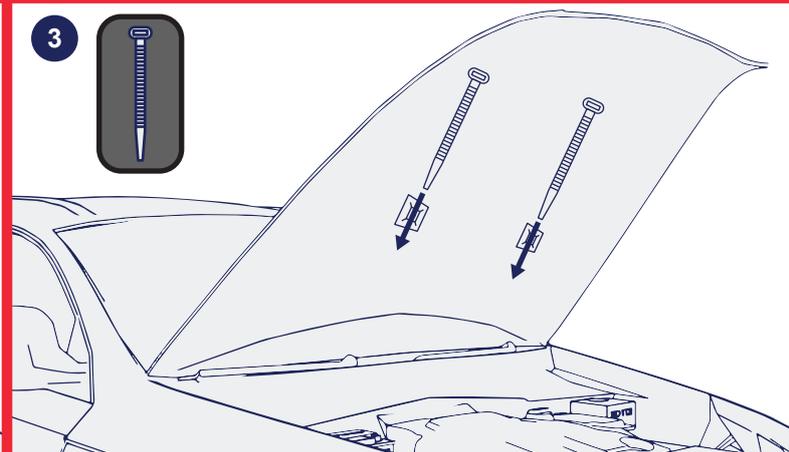


Pull the plastic "zip ties" through the holes in the plastic squares.

4

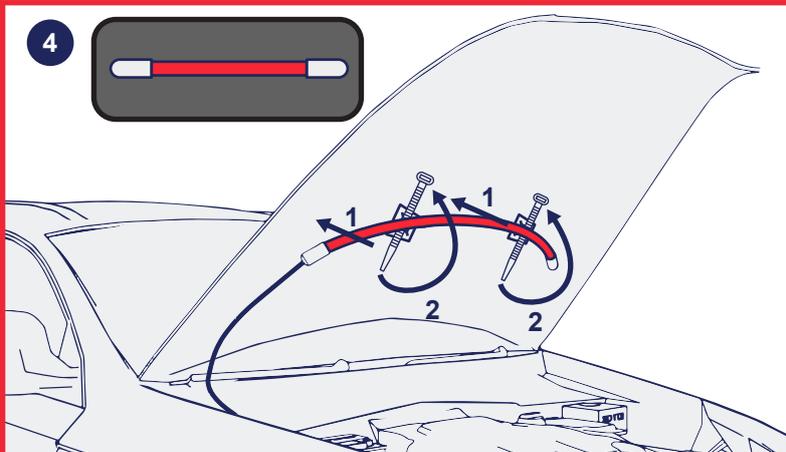


Then place the fire extinguishing system in a pre-selected location and tighten appropriately with the "zip ties".

5

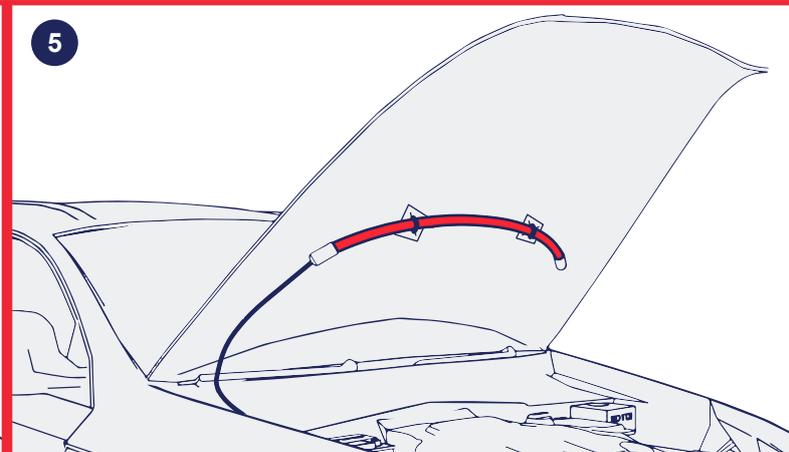


6

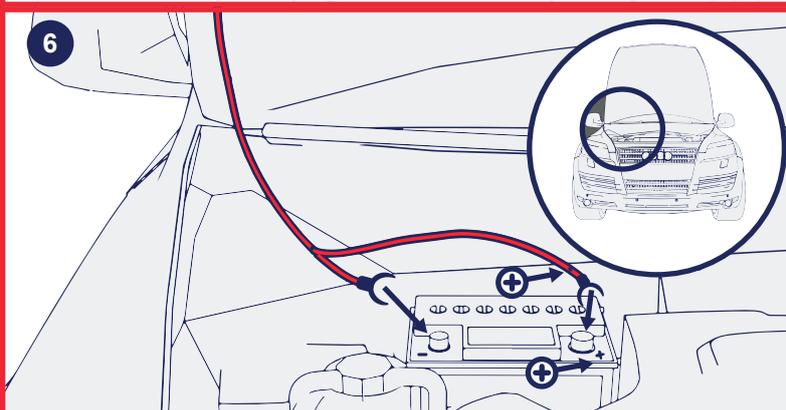

In the last step, connect the wires to the car battery (red plus to plus and blue minus to minus)

7

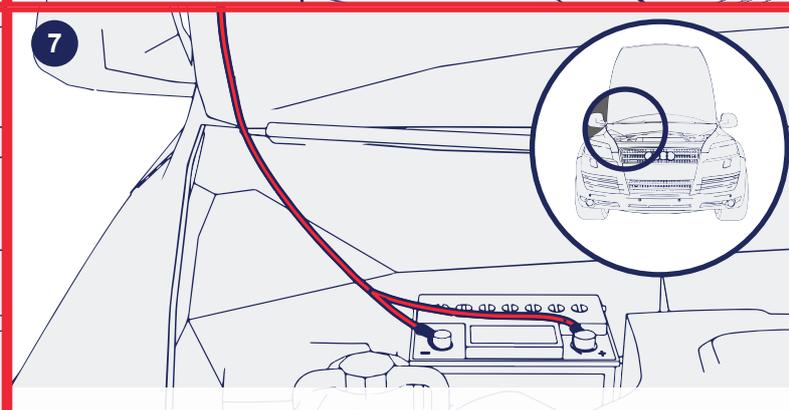

Check the functionality of the extinguishing system by starting up the engine. The LED on the system has to light up after a small time delay.